


Auto Generator Start wiring diagram – For Honda (EU7000is using Remote Switch Plug)



NOTE:
ME-AGS-N is shown, but ME-AGS-S can be used also.

NOTE:
Turn and leave generator key in "ON" Position to enable remote start.

NOTE:
First Remove factory shorting plug from inside compartment

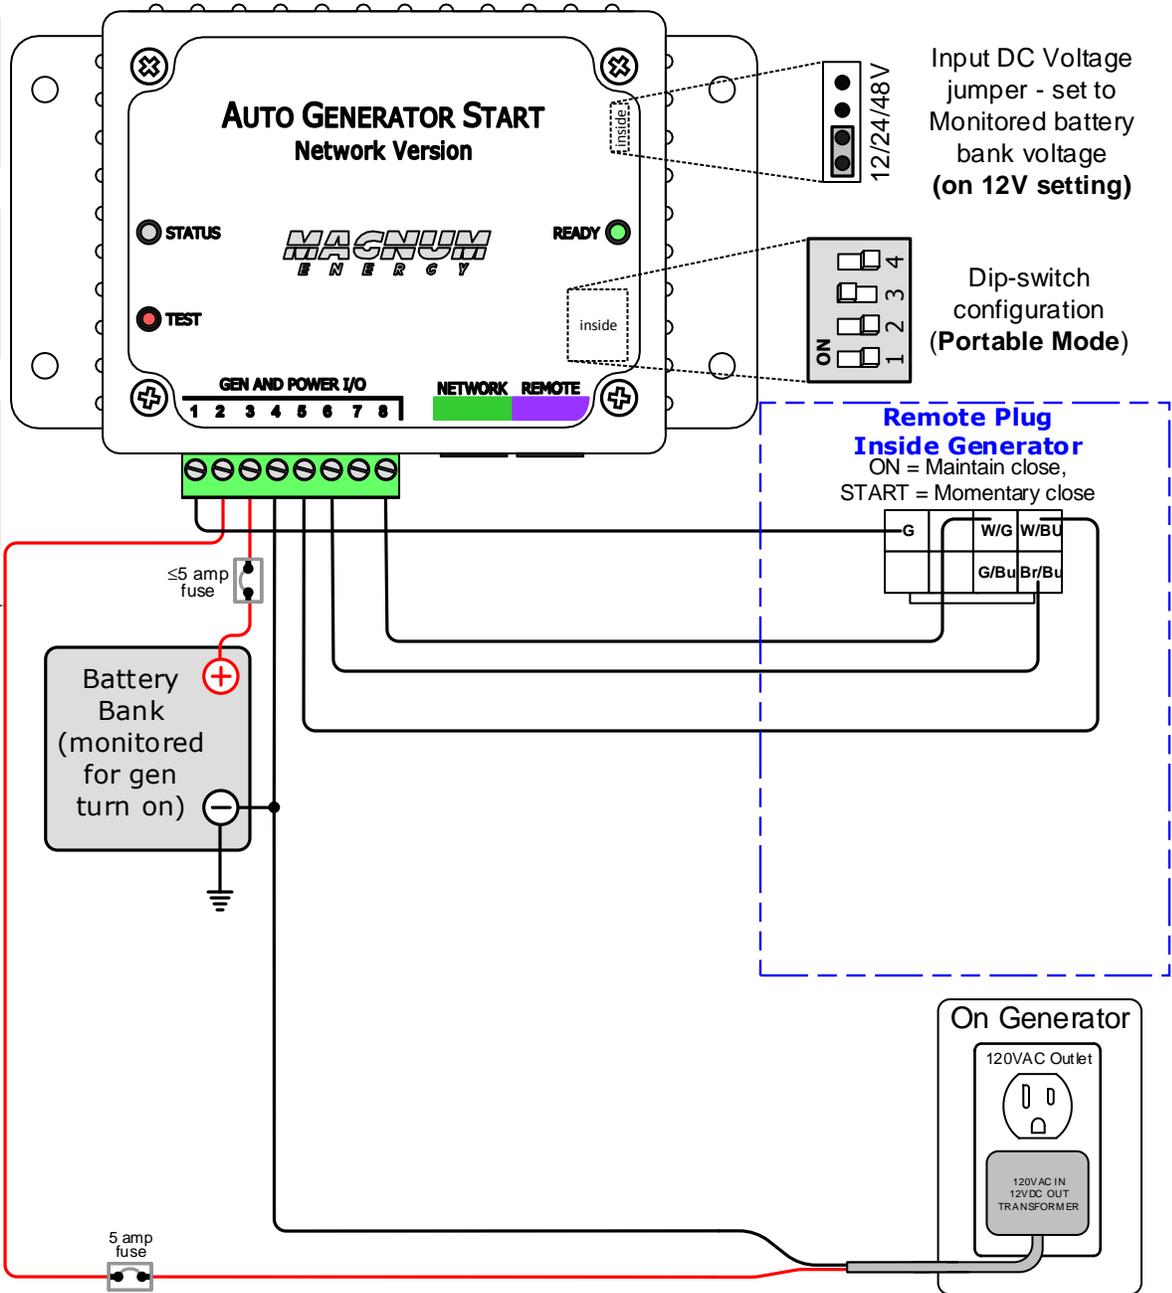

Gen Run Signal (input to pin 2 must be 10 to 40 DC volts only while generator is running); can be the generator hour-meter, a 12vdc pilot/run light, or see Alternative Options in the AGS Manual

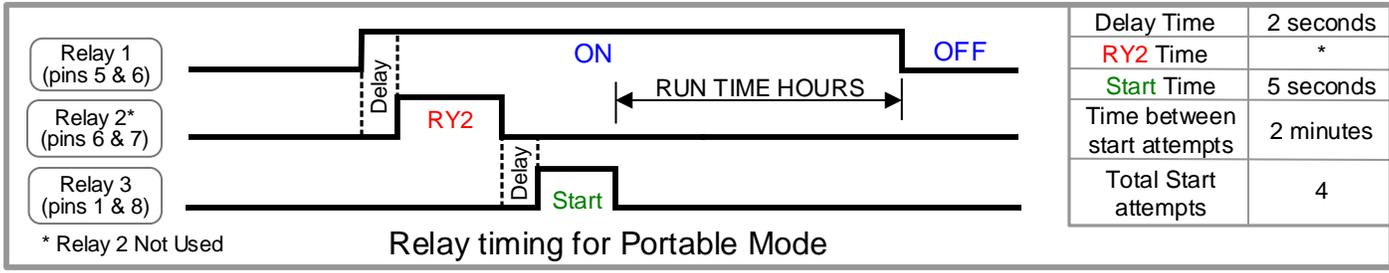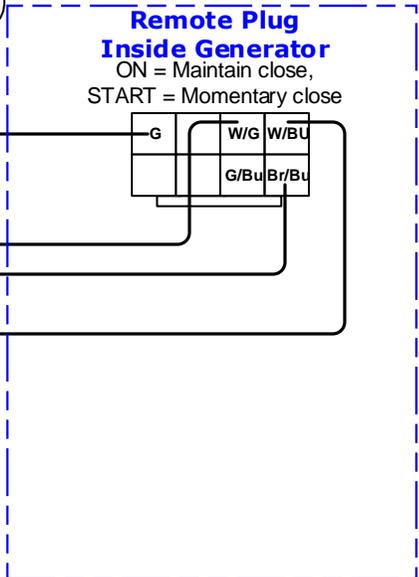

Magnum Energy, Inc. provides this diagram to assist in the installation of the Auto-Generator Start controller. Since the use of this diagram and the conditions or methods of installation, operation and use are beyond the control of Magnum Energy, Inc., we do not assume responsibility and expressly disclaim liability for loss, damage or expense arising out of the installation, operation and use of this unit.