ME-AGS wiring diagram –
For Generac Guardian (Model 04389-3)

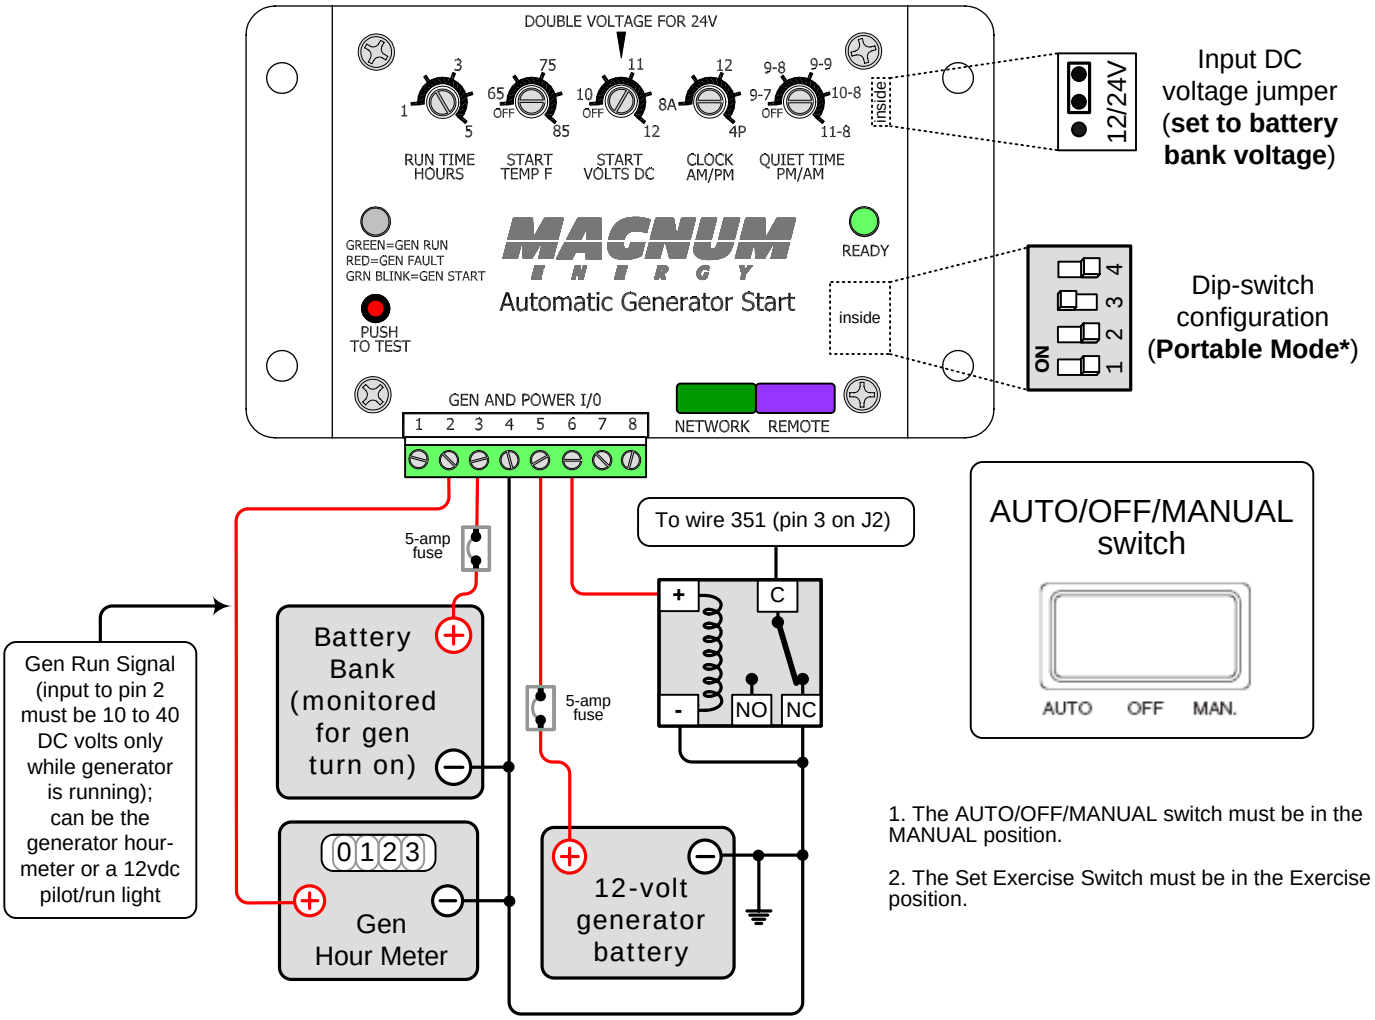

1. The AUTO/OFF/MANUAL switch must be in the MANUAL position.

2. The Set Exercise Switch must be in the Exercise position.

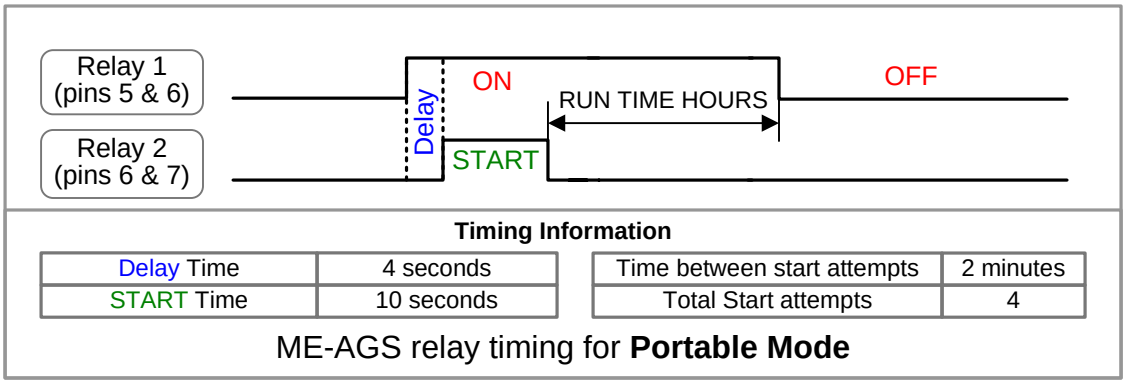

Timing Information

Delay Time	4 seconds	Time between start attempts	2 minutes
START Time	10 seconds	Total Start attempts	4

ME-AGS relay timing for **Portable Mode**

*** to enable Portable Mode, the ME-AGS must be revision 3.2 or higher**

Magnum Energy, Inc. provides this diagram to assist in the installation of the Auto-Generator Start controller. Since the use of this diagram and the conditions or methods of installation, operation and use are beyond the control of Magnum Energy, Inc., we do not assume responsibility and expressly disclaim liability for loss, damage or expense arising out of the installation, operation and use of this unit.

10-3-2007